



# Over Drive Wiring Diagrams


Haynes Manual: MkIII (\*wire colors may not be correct)

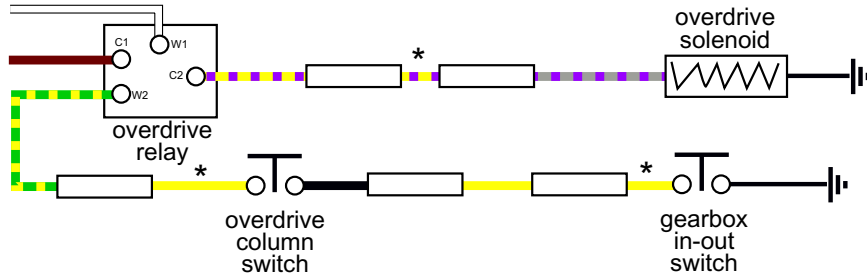

Haynes Manual: LHD MkIV to 1500 (\*wire colors may not be correct)

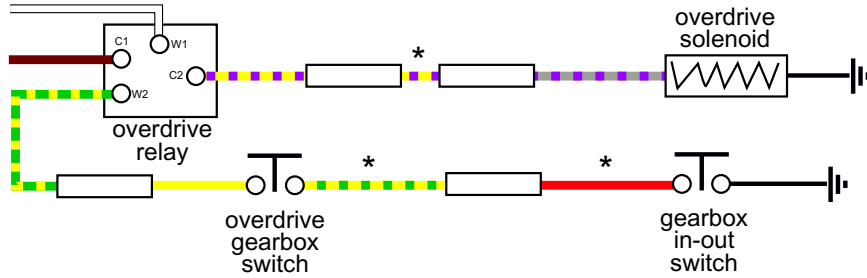

Factory Owners Manual: LHD MkIV

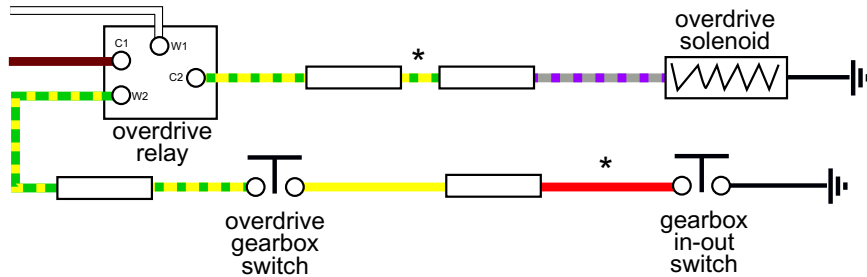


Haynes & Bentley Manuals: 1500 from Comm. Number 1 to FH100020



Haynes Manual: US 1500 from Comm. Number 1 to FM40000 (Haynes does not indicate wire colors)



Haynes Manual: US 1500 from Comm. Number FM40000 to FM95000 (\*wire colors may not be correct)

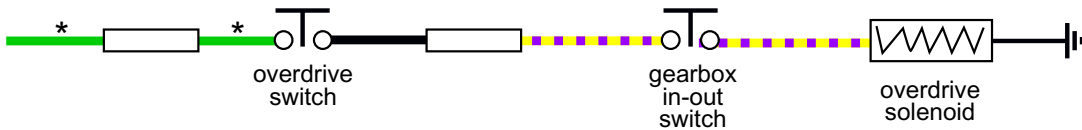

Haynes Manual: US 1500 from Comm. Number FM95001 and up (\*wire colors may not be correct)

